

Necessary steps before first use:

Remove battery insulator

Unscrew the two screws (Torx 20). Pull the housing upwards. Be careful! The battery could fall out. Take the battery out. Remove the round plastic disc (insulator).

SIM card

If the unit does not already have one, insert a SIM card (Nano SIM).

Remount



The O-rings must be clean. The inside of the housing must be clean and dry.

Put the housing back on the unit and press it down carefully. Screw the screws back in and tighten them gently.



Turning ON/OFF:

Turn on

Hold the magnet near the I/O symbol. The LED is flashing 3 times. The unit is activated.

Turn off

Hold the magnet 4 seconds near the I/O symbol. The LED lights up constantly. Do not remove the magnet until the LED changes to flashing. The unit is deactivated, the LED goes out.



SmartEAR – First use

English / Deutsch

sebaKMT
by Megger®



You can find more information at

www.sebakmt.de/promotion-smartear-en.html



Schritte vor der ersten Benutzung:

Batterie-Isolator entfernen

Die Schrauben am Gerät heraus drehen (Torx 20). Gehäuse behutsam nach oben ziehen. Vorsicht! Batterie kann heraus fallen. Batterie entnehmen. Die Kunststoff-scheibe (Isolator) entfernen.

SIM-Karte

Falls das Gerät noch nicht über eine SIM-Karte verfügt, legen Sie eine SIM-Karte ein (Nano-SIM).

Zusammenbauen




Die O-Ringe müssen sauber sein. Die Innenseite des Gehäuses muss sauber und trocken sein.

Batterie einsetzen, Pluspol nach oben. Gehäuse auf das Gerät setzen und vorsichtig nach unten drücken. Schrauben eindrehen und behutsam festziehen.



Nano-SIM Slot

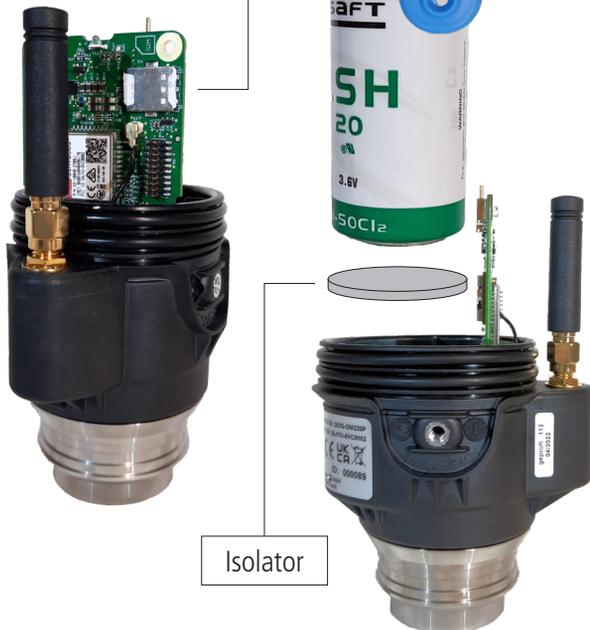

Einschalten/Ausschalten:

Einschalten

Magnet seitlich des I/O-Symbols halten. Die LED leuchtet 3 mal auf. Das Gerät ist aktiviert.

Ausschalten

Magnet 4 Sekunden lang seitlich des I/O-Symbols halten. Die LED leuchtet konstant. Den Magnet erst entfernen, wenn die LED in ein Blinken übergeht. Das Gerät wird deaktiviert, die LED erlischt.



SmartEAR – Erstnutzung

English / Deutsch

sebaKMT
by Megger®



Sie finden viele weitere Informationen unter www.sebakmt.de/promotion-smartear.html

